




213 Duck Run Road, P.O. Box 180, Mackeyville, Pennsylvania 17750 USA
Tel: +1 570 726 6961 Fax: +1 570 726 7466
sales@americanpiezo.com

Frequently Asked Question


Q) Where do I connect DC voltage to a Nebulizer Board (50-1011.1)?
A) See the explanation below.

1.65 MHz Nebulizer Board (50-1011.1)

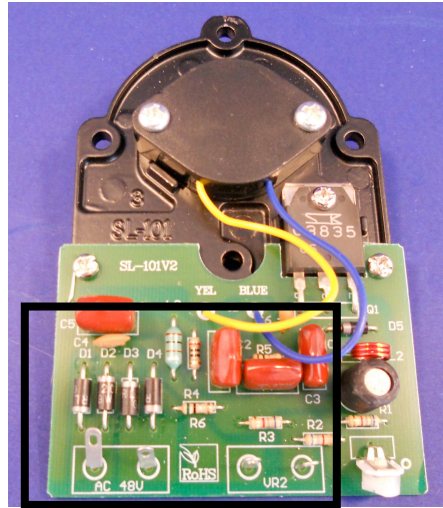

Solder 48 VDC (+)
wire to D2 here

Solder 48 VDC (-)
wire to D1 here

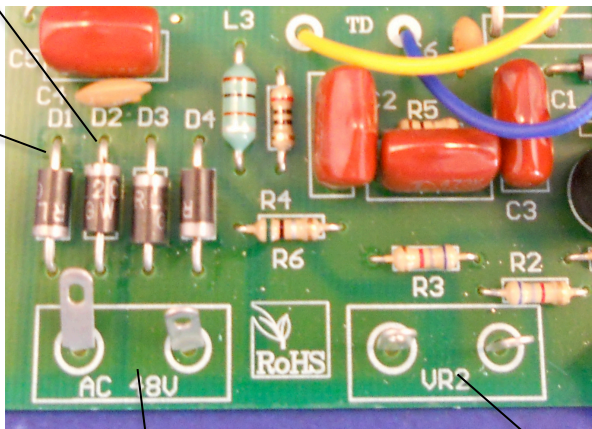

48 VRMS
AC

VR2 Float
Switch

Rev: JZ 3/18/2011